



**Continental Disc<sup>®</sup>  
Corporation**

GEP-6112  
Ref. I.D.: 15463

## Preparation and Installation of the Well Activation and Safety Protection Valve, Type I

### WARNING

THIS PRODUCT UTILIZES A RUPTURE DISC AS THE ACTIVATION ELEMENT. THEREFORE, THE FOLLOWING WARNINGS THAT PERTAIN TO THE PREPARATION AND INSTALLATION OF RUPTURE DISCS APPLY.

USER SHOULD READ AND THOROUGHLY UNDERSTAND THESE INSTRUCTIONS BEFORE INSTALLING RUPTURE DISC. THESE INSTRUCTIONS DO NOT PURPORT TO ADDRESS ALL OF THE SAFETY FACTORS ASSOCIATED WITH THE RUPTURE DISC'S USE IN SERVICE. IT IS THE RESPONSIBILITY OF THE USER TO ESTABLISH APPROPRIATE SAFETY, HEALTH, AND TRAINING MEASURES FOR THEIR PERSONNEL INSTALLING, SERVICING, OR WORKING IN AN AREA WHERE RUPTURE DISC ASSEMBLIES ARE IN USE. SERVICE AND/OR MAINTENANCE ON OR AROUND THE RUPTURE DISC DEVICE MUST NOT BE PERFORMED WHILE THE DEVICE IS SUBJECTED TO OPERATING PRESSURES AND/OR TEMPERATURES.

IT IS THE USER'S SOLE RESPONSIBILITY FOR DESIGN AND PLACEMENT OF RUPTURE DISCS WITHIN THEIR FACILITY AND UPON THE EQUIPMENT UPON WHICH THE RUPTURE DISC OF USER'S SELECTION IS TO BE LOCATED. IT IS USER'S SOLE RESPONSIBILITY FOR THE DESIGN OF ADEQUATE VENTING AND INSTALLATION OF ADEQUATE VENT PIPING OR DIRECTIONAL FLOW AFTER RUPTURE OCCURS WITH THE RUPTURE DISC AS INTENDED. WHEN SIZE IS SPECIFIED, CONTINENTAL DISC CORPORATION ASSUMES THAT ADEQUATE PROVISIONS HAVE BEEN MADE BY PURCHASER FOR PROPER VENTING OF A SYSTEM TO RELIEVE THE SPECIFIC PRESSURE. LOCATE RUPTURE DISC WHERE PEOPLE OR PROPERTY WILL NOT BE EXPOSED TO THE SYSTEM DISCHARGE IN CASE OF RUPTURE. VENT TOXIC OR FLAMMABLE FUMES OR LIQUIDS TO A SAFE LOCATION TO PREVENT PERSONAL INJURY OR PROPERTY DAMAGE.

IT IS THE USER'S SOLE RESPONSIBILITY TO SPECIFY THE BURST PRESSURE RATING OF A RUPTURE DISC AT A COINCIDENT TEMPERATURE AT WHICH THE RUPTURE DISC IS TO BE USED. A RUPTURE DISC IS A TEMPERATURE SENSITIVE DEVICE. THE BURST PRESSURE OF THE RUPTURE DISC IS DIRECTLY AFFECTED BY ITS EXPOSURE TO THE COINCIDENT TEMPERATURE. GENERALLY, AS THE TEMPERATURE AT THE RUPTURE DISC INCREASES, THE BURST PRESSURE DECREASES; INVERSELY, AS THE TEMPERATURE AT THE RUPTURE DISC DECREASES, THE BURST PRESSURE MAY INCREASE. FAILURE TO PROPERLY UTILIZE A RUPTURE DISC AT THE SPECIFIED COINCIDENT TEMPERATURE COULD CAUSE PREMATURE FAILURE OR OVERPRESSURIZATION OF A SYSTEM.

THE INSTANTANEOUS RELEASE OF PRESSURE FROM THE RUPTURE DISC CAN CREATE VIOLENT NOISES DUE TO THE DISCHARGE AT SONIC VELOCITY. IT IS THE USER'S SOLE RESPONSIBILITY TO PROTECT AGAINST HEARING DAMAGE TO ANY BYSTANDERS.

RUPTURE DISCS AND TAGS ARE MADE OF METAL FOILS OF VARYING THICKNESS. THE METAL EDGES MAY BE SHARP. PERSONNEL INSTALLING OR EXAMINING THE RUPTURE DISCS SHOULD PROTECT AGAINST CUTS OR INJURY WHEN HANDLING THE RUPTURE DISC. DO NOT LIFT A RUPTURE DISC BY ITS ATTACHED TAG.

PARTICLES MAY BE DISCHARGED WHEN THE RUPTURE DISC RUPTURES. THESE PARTICLES MAY BE PART OF THE RUPTURE DISC ITSELF, OR OTHER ENVIRONMENTAL MATTER IN THE SYSTEM. IT IS THE USER'S SOLE RESPONSIBILITY TO ASSURE THAT THESE PARTICLES ARE DIRECTED TO A SAFE AREA TO PREVENT PERSONAL INJURY OR PROPERTY DAMAGE.

THERE IS NO GUARANTEE OF RUPTURE DISC LIFE. SUCH LIFE SPAN IS AFFECTED BY CORROSION, CREEP AND FATIGUE, AND PHYSICAL DAMAGE. THESE CONDITIONS WILL DERATE THE RUPTURE DISC TO A LOWER SET PRESSURE. THE CUSTOMER AND/OR USER SHOULD BE PREPARED TO HANDLE PREMATURE FAILURE OF THE RUPTURE DISC. THE MEDIA OR OTHER ENVIRONMENTAL CONDITIONS SHOULD NOT ALLOW ANY BUILDUP OR SOLIDIFICATION OF MEDIA TO OCCUR ON A RUPTURE DISC. THIS MAY INCREASE THE PRESSURE SETTING OF THE RUPTURE DISC.

CUSTOMER AND/OR ITS INSTALLER SHALL BE SOLELY RESPONSIBLE FOR THE PROPER INSTALLATION OF SELLER'S HOLDERS AND RUPTURE DISCS INTO A SYSTEM. CUSTOMER AND/OR ITS INSTALLER SHALL BE SOLELY RESPONSIBLE FOR IMPROPER INSTALLATION AND PHYSICAL DAMAGE RESULTING THEREFROM, INCLUDING BUT NOT LIMITED TO, DAMAGE RESULTING FROM LEAKAGE, IMPROPER TORQUING OR SEATING OF A RUPTURE DISC OR FAILURE TO FOLLOW INSTALLATION INSTRUCTIONS WHERE PROVIDED.

RUPTURE DISCS ARE PRECISION SAFETY DEVICES AND MUST BE INSTALLED PROPERLY. RUPTURE DISCS MUST BE INSTALLED BY TRAINED, KNOWLEDGEABLE INSTALLERS AND ONLY WITHIN ENVIRONMENTS SUITABLE AND APPROPRIATE FOR A RUPTURE DISC. CARE MUST BE USED IN A FACILITY'S DESIGN TO PROTECT BOTH THE RUPTURE DISC FROM INADVERTENT DAMAGE WHICH COULD CAUSE ITS PREMATURE RELEASE AND TO PROTECT INDIVIDUALS EXPOSED TO HAZARDS CREATED BY SUCH SUDDEN RELEASE.

PROPER INSTALLATION OF A RUPTURE DISC IS CRITICAL TO PERFORMANCE AND TO SAFETY. FAILURE TO PROVIDE PROPER SEATING OF A RUPTURE DISC MAY AFFECT RUPTURE DISC PERFORMANCE, BURST PRESSURE ACCURACY AND MAY RESULT IN ITS PREMATURE FAILURE.

## I. Safety Precautions Before Installation

1. Do not remove protective coverings until unit is to be installed.
2. The Well Activation and Safety Protection Valve is a precision instrument and must be handled with extreme care. The valve utilizes a rupture disc as the activation element. The product should be installed only by qualified personnel familiar with rupture discs.

## II. Preparing the Valve for Installation

1. Carefully remove and discard all shipping protective coverings furnished with the valve.
2. Clean all foreign material from the threaded area of the valve assembly and the inlet port of your device.
3. Examine the rupture disc. Do not install the unit if the rupture disc is damaged. A damaged rupture disc is any rupture disc with visible nicks or dents in the dome.
4. Inspect the O-ring for visible damage. Do not install if missing or damaged.

## III. Installing the Valve into the System

1. Assure that the unit being installed is compatible with current system operating conditions. See Table 1 for the list of standard burst pressures and temperatures.
2. Using a 1/4" hex bit socket, install the unit into the system and torque to 100 in-lbs.

## IV. Customer Service

If you wish to discuss your application, installation, or maintenance, please contact the Customer Service Department at one of the addresses shown on the last page of these instructions.

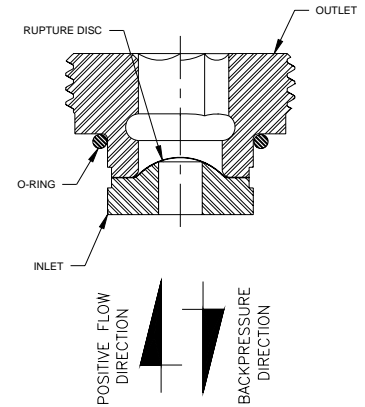


Table 1 – List of Standard Burst Pressures and Temperatures (Type I)

Part Number	Specified Burst Pressure at Temperature (psig)	Burst Pressure at Temperature (psig)							
		100°F	150°F	200°F	250°F	300°F	350°F	400°F	450°F
WSP-I01	<b>1,000 @ 100°F</b>	<b>1,000</b>	980	960	949	939	929	929	919
WSP-I02	<b>1,500 @ 100°F</b>	<b>1,500</b>	1,470	1,439	1,424	1,409	1,394	1,394	1,379
WSP-I03	<b>2,000 @ 100°F</b>	<b>2,000</b>	1,960	1,919	1,899	1,879	1,859	1,859	1,838
WSP-I04	<b>2,500 @ 100°F</b>	<b>2,500</b>	2,449	2,399	2,374	2,348	2,323	2,323	2,298
WSP-I05	<b>3,000 @ 100°F</b>	<b>3,000</b>	2,939	2,879	2,848	2,818	2,788	2,788	2,758
WSP-I06	<b>3,500 @ 100°F</b>	<b>3,500</b>	3,429	3,359	3,323	3,288	3,253	3,253	3,217
WSP-I07	<b>4,000 @ 100°F</b>	<b>4,000</b>	3,919	3,838	3,798	3,758	3,717	3,717	3,677
WSP-I08	<b>4,500 @ 100°F</b>	<b>4,500</b>	4,409	4,318	4,273	4,227	4,182	4,182	4,136
WSP-I09	<b>5,000 @ 150°F</b>	5,103	<b>5,000</b>	4,897	4,845	4,794	4,742	4,742	4,691
WSP-I10	<b>5,500 @ 150°F</b>	5,613	<b>5,500</b>	5,387	5,330	5,273	5,216	5,216	5,160
WSP-I11	<b>6,000 @ 150°F</b>	6,124	<b>6,000</b>	5,876	5,814	5,753	5,691	5,691	5,629
WSP-I12	<b>6,500 @ 150°F</b>	6,634	<b>6,500</b>	6,366	6,299	6,232	6,165	6,165	6,098
WSP-I13	<b>7,000 @ 200°F</b>	7,295	7,147	<b>7,000</b>	6,926	6,853	6,779	6,779	6,705
WSP-I14	<b>7,500 @ 200°F</b>	7,816	7,658	<b>7,500</b>	7,421	7,342	7,263	7,263	7,184
WSP-I15	<b>8,000 @ 200°F</b>	8,337	8,168	<b>8,000</b>	7,916	7,832	7,747	7,747	7,663
WSP-I16	<b>8,500 @ 200°F</b>	8,858	8,679	<b>8,500</b>	8,411	8,321	8,232	8,232	8,142
WSP-I17	<b>9,000 @ 200°F</b>	9,379	9,189	<b>9,000</b>	8,905	8,811	8,716	8,716	8,621
WSP-I18	<b>9,500 @ 250°F</b>	10,005	9,803	9,601	<b>9,500</b>	9,399	9,298	9,298	9,197
WSP-I19	<b>10,000 @ 250°F</b>	10,532	10,319	10,106	<b>10,000</b>	9,894	9,787	9,787	9,681
WSP-I20	<b>10,500 @ 250°F</b>	11,059	10,835	10,612	<b>10,500</b>	10,388	10,277	10,277	10,165
WSP-I21	<b>11,000 @ 250°F</b>	11,585	11,351	11,117	<b>11,000</b>	10,883	10,766	10,766	10,649
WSP-I22	<b>11,500 @ 250°F</b>	12,112	11,867	11,622	<b>11,500</b>	11,378	11,255	11,255	11,133
WSP-I23	<b>12,000 @ 300°F</b>	12,774	12,516	12,258	12,129	<b>12,000</b>	11,871	11,871	11,742



**Continental Disc<sup>®</sup>  
Corporation**

***Performance Under Pressure<sup>®</sup>***



First Certified in 1992



**ASME Code Symbol Stamp**  
If stamped, this product is built in accordance with the requirements of the ASME Boiler and Pressure Vessel Code, Section VIII, Division 1.

**China Manufacture License**  
Products are in full compliance with the provisions of the Peoples Republic of China Import Regulations for Boiler and Pressure Vessel safety devices.



**3A Sanitary Standards Stamp**  
If stamped, this product is in full compliance with the 3A Standards, Serial #60-00, of the International Association of Milk, Food, and Environmental Sanitarians, Inc.



**European Union CE Mark**  
If stamped, this product is certified to conform to the essential requirements of the Pressure Equipment Directive.

Continental Disc Corporation has representatives located throughout the world.  
Contact the C.D.C. office nearest you for the authorized representative in your area.

**CORPORATE HEADQUARTERS**

**Continental Disc Corporation**

3160 W. Heartland Drive  
Liberty, Missouri 64068-3385 USA  
Phone: (816) 792-1500  
FAX: (816) 792-2277 / 5447  
E-mail: [pressure@contdisc.com](mailto:pressure@contdisc.com)  
Website: [www.contdisc.com](http://www.contdisc.com)

**THE NETHERLANDS**

Continental Disc Corporation  
Energieweg 20  
2382 NJ Zoeterwoude-Rijndijk  
The Netherlands  
Phone: +(31) 71-5412221  
FAX: +(31) 71-5414361  
E-mail: [cdcni@contdisc.com](mailto:cdcni@contdisc.com)

**CHINA**

Continental Disc Corporation  
Room 910, Tower B, COFCO Plaza  
No. 8 JianGuoMenNei Avenue  
Beijing (100005)  
P.R. China  
Mobile: +(86) 137 0103 8871  
E-mail: [cdcchina@contdisc.com](mailto:cdcchina@contdisc.com)

**DUBAI**

Continental Disc Corporation  
P. O. Box 2234  
Dubai, U.A.E.  
Phone: +(971) 43214490  
Fax: +(971) 43438840  
Mobile: +(971) 508129525  
E-mail: [cdcme@contdisc.com](mailto:cdcme@contdisc.com)