



**Continental Disc®
Corporation**

Preparation and Installation of the MX-9T Rupture Disc / MX-9T / MX-9T-RH Holder Assembly

WARNING

USER SHOULD READ AND THOROUGHLY UNDERSTAND THESE INSTRUCTIONS BEFORE INSTALLING RUPTURE DISC. THESE INSTRUCTIONS DO NOT PURPORT TO ADDRESS ALL OF THE SAFETY FACTORS ASSOCIATED WITH THE RUPTURE DISC'S USE IN SERVICE. IT IS THE RESPONSIBILITY OF THE USER TO ESTABLISH APPROPRIATE SAFETY, HEALTH, AND TRAINING MEASURES FOR THEIR PERSONNEL INSTALLING, SERVICING, OR WORKING IN AN AREA WHERE RUPTURE DISC ASSEMBLIES ARE IN USE. SERVICE AND/OR MAINTENANCE ON OR AROUND THE RUPTURE DISC DEVICE MUST NOT BE PERFORMED WHILE THE DEVICE IS SUBJECTED TO OPERATING PRESSURES AND/OR TEMPERATURES.

IT IS THE USER'S SOLE RESPONSIBILITY FOR DESIGN AND PLACEMENT OF RUPTURE DISCS WITHIN THEIR FACILITY AND UPON THE EQUIPMENT UPON WHICH THE RUPTURE DISC OF USER'S SELECTION IS TO BE LOCATED. IT IS USER'S SOLE RESPONSIBILITY FOR THE DESIGN OF ADEQUATE VENTING AND INSTALLATION OF ADEQUATE VENT PIPING OR DIRECTIONAL FLOW AFTER RUPTURE OCCURS WITH THE RUPTURE DISC AS INTENDED. WHEN SIZE IS SPECIFIED, CONTINENTAL DISC CORPORATION ASSUMES THAT ADEQUATE PROVISIONS HAVE BEEN MADE BY PURCHASER FOR PROPER VENTING OF A SYSTEM TO RELIEVE THE SPECIFIC PRESSURE. LOCATE RUPTURE DISC WHERE PEOPLE OR PROPERTY WILL NOT BE EXPOSED TO THE SYSTEM DISCHARGE IN CASE OF RUPTURE. VENT TOXIC OR FLAMMABLE FUMES OR LIQUIDS TO A SAFE LOCATION TO PREVENT PERSONAL INJURY OR PROPERTY DAMAGE.

IT IS THE USER'S SOLE RESPONSIBILITY TO SPECIFY THE BURST PRESSURE RATING OF A RUPTURE DISC AT A COINCIDENT TEMPERATURE AT WHICH THE RUPTURE DISC IS TO BE USED. A RUPTURE DISC IS A TEMPERATURE SENSITIVE DEVICE. THE BURST PRESSURE OF THE RUPTURE DISC IS DIRECTLY AFFECTED BY ITS EXPOSURE TO THE COINCIDENT TEMPERATURE. GENERALLY, AS THE TEMPERATURE AT THE RUPTURE DISC INCREASES, THE BURST PRESSURE DECREASES; INVERSELY, AS THE TEMPERATURE AT THE RUPTURE DISC DECREASES, THE BURST PRESSURE MAY INCREASE. FAILURE TO PROPERLY UTILIZE A RUPTURE DISC AT THE SPECIFIED COINCIDENT TEMPERATURE COULD CAUSE PREMATURE FAILURE OR OVERPRESSURIZATION OF A SYSTEM.

THE INSTANTANEOUS RELEASE OF PRESSURE FROM THE RUPTURE DISC CAN CREATE VIOLENT NOISES DUE TO THE DISCHARGE AT SONIC VELOCITY. IT IS THE USER'S SOLE RESPONSIBILITY TO PROTECT AGAINST HEARING DAMAGE TO ANY BYSTANDERS.

RUPTURE DISCS AND TAGS ARE MADE OF METAL FOILS OF VARYING THICKNESS. THE METAL EDGES MAY BE SHARP. PERSONNEL INSTALLING OR EXAMINING THE RUPTURE DISCS SHOULD PROTECT AGAINST CUTS OR INJURY WHEN HANDLING THE RUPTURE DISC. DO NOT LIFT A RUPTURE DISC BY ITS ATTACHED TAG.

PARTICLES MAY BE DISCHARGED WHEN THE RUPTURE DISC RUPTURES. THESE PARTICLES MAY BE PART OF THE RUPTURE DISC ITSELF, OR OTHER ENVIRONMENTAL MATTER IN THE SYSTEM. IT IS THE USER'S SOLE RESPONSIBILITY TO ASSURE THAT THESE PARTICLES ARE DIRECTED TO A SAFE AREA TO PREVENT PERSONAL INJURY OR PROPERTY DAMAGE.

THERE IS NO GUARANTEE OF RUPTURE DISC LIFE. SUCH LIFE SPAN IS AFFECTED BY CORROSION, CREEP AND FATIGUE, AND PHYSICAL DAMAGE. THESE CONDITIONS WILL DERATE THE RUPTURE DISC TO A LOWER SET PRESSURE. THE CUSTOMER AND/OR USER SHOULD BE PREPARED TO HANDLE PREMATURE FAILURE OF THE RUPTURE DISC. THE MEDIA OR OTHER ENVIRONMENTAL CONDITIONS SHOULD NOT ALLOW ANY BUILDUP OR SOLIDIFICATION OF MEDIA TO OCCUR ON A RUPTURE DISC. THIS MAY INCREASE THE PRESSURE SETTING OF THE RUPTURE DISC.

CUSTOMER AND/OR ITS INSTALLER SHALL BE SOLELY RESPONSIBLE FOR THE PROPER INSTALLATION OF SELLER'S HOLDERS AND RUPTURE DISCS INTO A SYSTEM. CUSTOMER AND/OR ITS INSTALLER SHALL BE SOLELY RESPONSIBLE FOR IMPROPER INSTALLATION AND PHYSICAL DAMAGE RESULTING THEREFROM, INCLUDING BUT NOT LIMITED TO, DAMAGE RESULTING FROM LEAKAGE, IMPROPER TORQUING OR SEATING OF A RUPTURE DISC OR FAILURE TO FOLLOW INSTALLATION INSTRUCTIONS WHERE PROVIDED.

RUPTURE DISCS ARE PRECISION SAFETY DEVICES AND MUST BE INSTALLED PROPERLY. RUPTURE DISCS MUST BE INSTALLED BY TRAINED, KNOWLEDGEABLE INSTALLERS AND ONLY WITHIN ENVIRONMENTS SUITABLE AND APPROPRIATE FOR A RUPTURE DISC. CARE MUST BE USED IN A FACILITY'S DESIGN TO PROTECT BOTH THE RUPTURE DISC FROM INADVERTENT DAMAGE WHICH COULD CAUSE ITS PREMATURE RELEASE AND TO PROTECT INDIVIDUALS EXPOSED TO HAZARDS CREATED BY SUCH SUDDEN RELEASE.

PROPER INSTALLATION OF A RUPTURE DISC IS CRITICAL TO PERFORMANCE AND TO SAFETY. FAILURE TO PROVIDE PROPER SEATING OF A RUPTURE DISC MAY AFFECT RUPTURE DISC PERFORMANCE, BURST PRESSURE ACCURACY AND MAY RESULT IN ITS PREMATURE FAILURE.

I. Safety Precautions Before Installation

1. The MX-9T rupture disc is a precision instrument and must be handled with extreme care. Rupture discs should be installed only by qualified personnel familiar with rupture discs and proper piping practices.
2. The score on the convex side of the rupture disc is a factory installed precision score. Do not install rupture disc if there is any damage in the dome area. A damaged rupture disc is any rupture disc with visible nicks or dents in the dome.
3. Continental Disc Corporation does not recommend reinstalling a rupture disc that has been removed from the holder as reinstallation may adversely affect the joint sealing capabilities and/or performance of the rupture disc.
4. See rupture disc tag to verify set pressure, operating temperature, and all other operating parameters.

II. Preparation of Holders for Installation

New Installation

Clean all foreign material from the rupture disc sealing area of both the holder inlet and outlet.

Replacement Installation


1. If the Burst Disc Indicator (B.D.I.®) Alarm System is used, disconnect the alarm strip from the monitor by unplugging the B.D.I. connector from the lead wire connector.
2. Remove the holder from the system and place on a flat surface.
3. Disassemble the holder by loosening the pre-assembly screws, or by removing the pre-assembly cap screws on the holder outlet. Lift the holder outlet up and set aside; then remove the burst rupture disc.
4. Clean the rupture disc sealing area of both the holder inlet and outlet. These surfaces must be completely clean and free of all rust, corrosion, and foreign material to ensure a proper seal. Use of solvents, steel wool, or fine emery cloth is permissible. Do not re-machine. Do not use scraper or abrasives.
5. Inspect the rupture disc sealing area for nicks, scratches, or pitting. If any of these conditions are present, consult the factory for repair.
6. Remove any adhered gasket material from previous installation.

III. Assembly of the Rupture Disc and Holder

Component parts of the holder assembly are illustrated in the proper installation sequence.

SIZES 1" THROUGH 12" (See Figure A)

1. Carefully remove and discard any shipping protectors furnished with rupture discs or holder. **DO NOT INSTALL A SHIPPING PROTECTOR IN A HOLDER ASSEMBLY.**
2. Place the holder outlet on a flat surface with the alignment pins pointing up. Sizes 4", 6", and 8" MX-9T-RH holder outlets, and 10" and 12" MX-9T holder outlets must be elevated from the work surface approximately 1" to avoid damage to the rupture disc dome during assembly.
NOTE: Alignment pin arrangement will vary depending on size.
3. Match the notches in the rupture disc with the shape of the pins. Place the rupture disc over the pins with the dome side down. The rupture disc tag will be face down.
4. Match the holes in the holder inlet with the shape of the pins in the holder outlet. Position the holder inlet carefully onto the alignment pins as shown, ensuring that the rupture disc is not damaged.
5. Fasten the assembly together by tightening the pre-assembly screws or by replacing and tightening the pre-assembly cap screws.
6. Invert assembled rupture disc and holder. Check all flow arrows for proper flow direction.


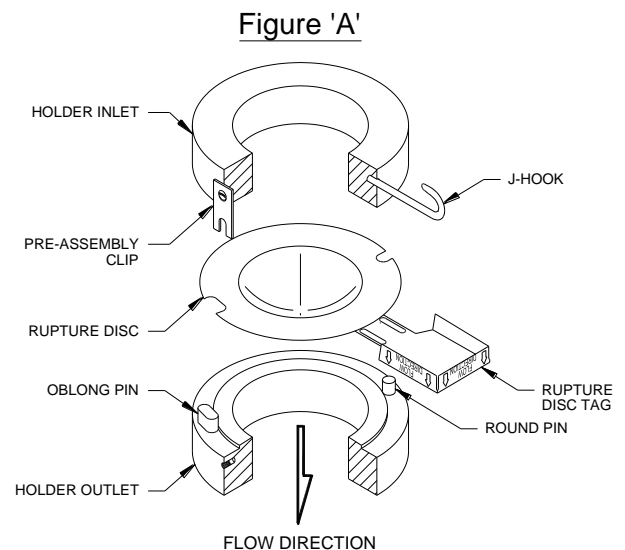


SIZES 14" THROUGH 36" (See Figure B)

- Carefully remove and discard any shipping protectors furnished with rupture discs or holder. **DO NOT INSTALL A SHIPPING PROTECTOR IN A HOLDER ASSEMBLY.**
- Place the holder inlet on a flat surface.
- Place the MX-9T rupture disc on the holder inlet opening with the dome facing up as illustrated.
- Align and lower the holder outlet carefully onto the holder inlet.
- Fasten the assembly together by installing and tightening the pre-assembly cap screws.


IV. Installation of the Holder Assembly Into the System (See Figure C)

- If the B.D.I. Alarm System is to be used, see the Universal B.D.I. Assembly installation instructions for additional details.
- Before placing the assembly into the system, ensure that the companion flange gasket surfaces are clean and free of all rust, corrosion, and foreign material.
- On sizes 1" through 12" a J-Hook is provided on the holder inlet to ensure correct installation of the assembly relative to flow direction. Prior to installation of the assembly, the corresponding inlet companion flange must be drilled to accommodate the J-Hook. Refer to the J-Hook Installation Guide for locating and drilling specifications.
- Install the holder assembly and customer furnished gaskets **WITH ALL FLOW ARROWS POINTING IN THE PROPER FLOW DIRECTION** and the J-Hook (if applicable) inserted into the drilled companion flange.
- Install lightly oiled free running studs and nuts to finger tightness. Using a cross torquing pattern (see **Figure D**), torque each nut with a calibrated torque wrench at 20% increments of recommended torque value (see **Table 1**). Repeat 20% increments and cross torquing pattern until final torque value is achieved. Recheck all nuts in rotational sequence at final torque value. These values are based on using gasket materials having a gasket factor of 2.75, gasket seating stress of 3,700 psi, and stud and nut material per ASME SA193-B7 and SA194-2H respectively, with a stress of up to 30,000 psi. The use of studs and nuts with lower strength may prove unsatisfactory.

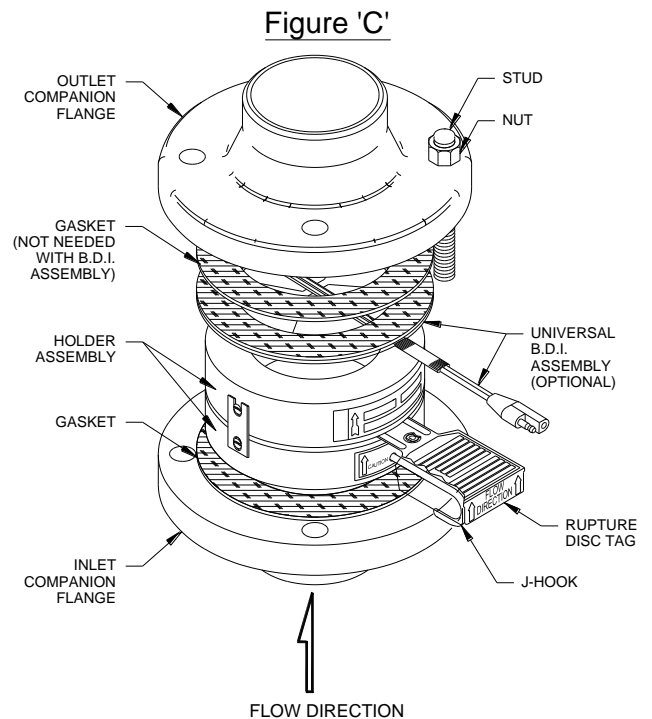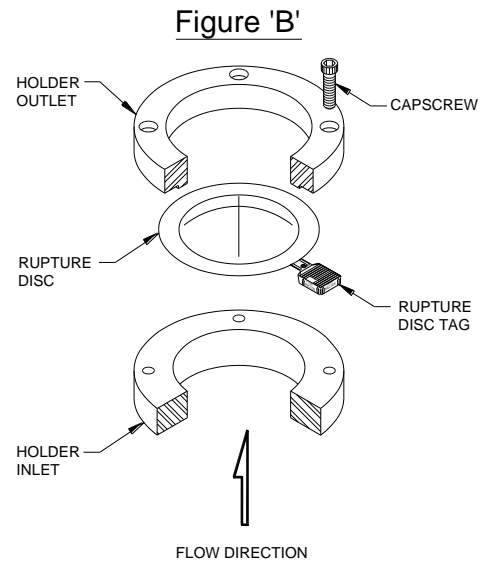

V. Preventative Maintenance

- Risk assessment and an annual rupture disc replacement are recommended. Rupture disc service life is determined by system operating conditions. The effects of severe pressure/vacuum cycles, corrosion, temperature variations, or other adverse conditions must be evaluated by the user through actual service experience to determine optimal service life.
- IF THE RUPTURE DISC IS NOT REPLACED PERIODICALLY WHEN EXPOSED TO THESE CONDITIONS, PREMATURE FAILURE OF THE RUPTURE DISC MAY OCCUR, THEREBY DISCHARGING THE PROCESS MEDIA.**
- To avoid extended downtime, maintain three spare rupture discs in stock at all times for each holder in use. The number of spares required ultimately will be determined by service conditions.

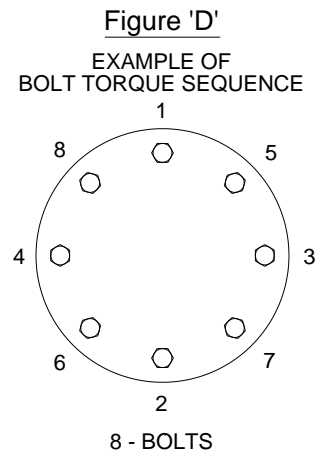

VI. Customer Service

If you wish to discuss your application, installation, or maintenance, please contact the Customer Service Department at our headquarters location.

B.D.I. ALARM SYSTEM OPERATING LIMITS


TEMPERATURE: -40° F to + 400° F
 (-40° C to + 204° C)

MAX CURRENT: 50 Milli Amps
MAX VOLTAGE: 24 VDC

FULFILLS THE REQUIREMENTS OF DIRECTIVE 2014/34/EU (ATEX) FOR: Equipment or protective system intended for use in potentially explosive atmospheres.

Conformity assessment performed by Notified Body no. 0359,
Intertek Testing and Certification Limited, Leatherhead, Surrey, UK.

BURST DISC INDICATOR (B.D.I.[®]): Sizes 25mm through 900mm (1 inch through 36 inches)

Marked:  II 1 G Ex ia IIC Tx Ga
II 1 D Ex ia IIIC Tx Da
I M1 Ex ia I Ma
(Tamb = -40°C ≤ Ta ≤ +204°C)

EC Type Examination Certificate: ITS13ATEX27734X

THE MAXIMUM INTRINSICALLY SAFE INPUT PARAMETERS ARE AS FOLLOWS:

Ui = 24V dc
Ii = 50 mA
Pi = 0.3W

THE EQUIVALENT PARAMETERS ARE:

Ci = 0
Li = 0

SPECIAL CONDITIONS FOR SAFE USE:

1. Temperature Class of the BDI sensor is marked as Tx, since the surface temperature is controlled by the process temperature being monitored. The sensor itself exhibits negligible temperature rise.
2. When located in an area requiring EPL Ga / Category 1G (e.g. Zone 0) hazardous area, the user shall ensure that electrostatic charging of the non-metallic parts cannot occur.
3. When provided with terminations by means of flying leads, these shall be terminated in an appropriately protected terminal box.
4. When installed, the BDI strip shall be provided with an IP rating of IP20 as a minimum.
5. For Group I applications, the BDI strip and terminations shall be protected to IP54 or better.

TABLE 1
Recommended Torque Values for Scored MX-9T
Rupture Discs Sizes 1" Through 36"

SIZE		COMPANION FLANGE RATING			RECOMMENDED TORQUE VALUE		SIZE		COMPANION FLANGE RATING			RECOMMENDED TORQUE VALUE			
IN	MM	ASME	DIN	JIS	FT•LB	N•m	IN	MM	ASME	DIN	JIS	FT•LB	N•m		
1	25	150	---	---	35	47	2	50	---	64	---	164	222		
		---	10/16	---	33	45			---	100	---	197	267		
		---	---	10/16/20	44	60			900/1500	---	---	160	217		
		300/600	---	---	65	88			---	160	---	367	498		
		---	25/40	---	49	66			---	250	---	184	249		
		---	64/100	30/40	66	89			2500	---	---	170	230		
		900/1500	---	---	180	244			3	80	150	---	---	65	88
		---	160	---	130	176					---	10/16	10	33	45
		---	250	---	162	220					---	---	16/20	41	56
		2500	---	---	100	136					300/600	---	---	120	163
1-1/2	40	150	---	---	35	47	---	25/40			---	101	137		
		---	10/16	10/16/20	44	60	---	---			30/40	126	171		
		300/600	---	---	120	163	---	64			---	126	171		
		---	25/40	---	101	137	---	100			---	151	205		
		---	64/100	30/40	126	171	900	---			---	180	244		
		900/1500	---	---	250	339	---	160			---	194	263		
		---	160	---	197	267	1500	---	---	255	346				
		---	250	---	236	320	---	250	---	241	327				
		2500	---	---	285	386	4	100	150	---	---	65	88		
		150	---	---	65	88			---	10/16	10	66	89		
---	10/16	10	66	89	---	---			16/20	82	111				
---	---	16/20	33	45	300	---			---	120	163				
300/600	---	---	65	88	---	25/40			---	126	171				
---	25/40	---	131	178	---	---			30	139	188				
---	---	30/40	66	89	600	---			---	185	251				

TABLE 1
Recommended Torque Values for Scored MX-9T
Rupture Discs Sizes 1" Through 36"

SIZE		COMPANION FLANGE RATING			RECOMMENDED TORQUE VALUE		SIZE		COMPANION FLANGE RATING			RECOMMENDED TORQUE VALUE			
IN	MM	ASME	DIN	JIS	FT•LB	N•m	IN	MM	ASME	DIN	JIS	FT•LB	N•m		
4	100	---	---	40	178	241	8	200	---	64/100	---	473	641		
		---	64	---	200	271			900	---	---	505	685		
		---	100	---	225	305			---	160	---	477	647		
		900	---	---	350	475			1500	---	---	595	807		
		---	160	---	331	449			---	250	---	562	762		
		1500	---	---	390	529			2500	---	---	735	997		
		---	250	---	368	449			10	250	150	---	---	185	251
		2500	---	---	465	631					---	10	---	166	225
6	150	150	---	---	120	163	---	---			10	183	248		
		---	10/16	10	126	171	---	16			16/20	200	271		
		---	---	16/20	92	125	300	---			---	275	373		
		300	---	---	120	163	---	25			---	390	529		
		---	25/40	---	227	308	---	40			30	433	587		
		---	---	30	151	205	600	---			---	435	590		
		600	---	---	275	373	---	100	---	657	891				
		---	---	40	260	352	900	---	---	475	644				
		---	64	---	487	660	---	160	---	712	965				
		---	100	---	325	441	12	300	150	---	---	185	251		
		900	---	---	325	441			---	10	---	166	225		
		---	160	---	341	462			---	---	10	137	186		
		1500	---	---	395	536			---	16	---	200	271		
		---	250	---	373	506			---	---	16/20	150	203		
2500	---	---	860	1166	300	---			---	375	508				
8	200	150	10	---	130	176			---	25	---	354	480		
		---	16	10	91	123			---	---	30	394	534		
		---	---	16/20	100	136	600	---	---	395	536				
		300	---	---	180	244	---	100	---	606	822				
		---	25	30	194	263	900	---	---	430	583				
		---	40	---	219	297	---	160	---	600	813				
		600	---	---	410	556									

SIZE		DISC RATING	COMPANION FLANGE RATING				RECOMMENDED TORQUE VALUE	
IN	MM	(PSIG)	ASME	MSS-SP44	DIN	JIS	FT•LB	N•m
14	350	up to 100	150	---	---	---	220	298
		up to 100	---	---	10	---	130	176
		up to 100	---	---	---	10	143	194
		up to 100	---	---	16	---	156	211
		up to 100	---	---	---	16/20	195	264
		100 to 275	150	---	---	---	275	373
		100 to 275	---	---	10	---	162	220
		100 to 275	---	---	---	10	179	243
		100 to 275	---	---	16	---	195	264
		100 to 275	---	---	---	16/20	244	331
		up to 350	300	---	---	---	---	375

TABLE 1
Recommended Torque Values for Scored MX-9T
Rupture Discs Sizes 1" Through 36"

SIZE		DISC RATING (PSIG)	COMPANION FLANGE RATING				RECOMMENDED TORQUE VALUE		
IN	MM		ASME	MSS-SP44	DIN	JIS	FT•LB	N•m	
14	350	up to 350	---	---	25	30	492	667	
		up to 350	---	---	40	---	541	733	
16	400	up to 100	150	---	---	---	220	298	
		up to 100	---	---	10	10	208	282	
		up to 100	---	---	16	---	234	317	
		up to 100	---	---	---	16/20	260	352	
		100 to 275	150	---	---	---	275	375	
		100 to 275	---	---	10	10	260	352	
		100 to 275	---	---	16	---	292	396	
		100 to 275	---	---	---	16/20	325	441	
		up to 350	300	---	---	---	---	485	658
		up to 350	---	---	---	25	---	630	854
		up to 350	---	---	---	---	30	461	625
		up to 350	---	---	---	40	---	687	931
18	450	up to 100	150	---	---	---	300	407	
		up to 100	---	---	---	10	202	274	
		up to 100	---	---	---	16/20	252	342	
		100 to 275	150	---	---	---	375	508	
		100 to 275	---	---	---	10	315	427	
		100 to 275	---	---	---	16/20	394	534	
20	500	up to 100	150	---	---	---	300	407	
		up to 100	---	---	10	10	252	342	
		up to 100	---	---	16	16/20	315	427	
		100 to 275	150	---	---	---	375	508	
		100 to 275	---	---	10	10	394	534	
		100 to 275	---	---	16	16/20	492	667	
24	600	up to 100	150	---	---	---	425	576	
		up to 100	---	---	10	---	361	489	
		up to 100	---	---	---	10	335	454	
		up to 100	---	---	16	---	442	599	
		up to 100	---	---	---	16/20	401	544	
		100 to 275	150	---	---	---	485	658	
		100 to 275	---	---	10	---	516	700	
		100 to 275	---	---	---	10	573	776	
		100 to 275	---	---	16	---	630	854	
		100 to 275	---	---	---	16/20	687	931	
28	700	up to 75	---	150	---	---	375	508	
		up to 75	---	---	10	---	372	504	
		up to 75	---	---	---	10	413	560	
		up to 75	---	---	16	---	455	617	
		up to 75	---	---	---	16	537	728	
		up to 75	---	---	---	20	620	841	
		75 to 275	---	150	---	---	485	658	
		75 to 275	---	---	10	---	481	652	

TABLE 1
Recommended Torque Values for Scored MX-9T
Rupture Discs Sizes 1" Through 36"

SIZE		DISC RATING (PSIG)	COMPANION FLANGE RATING				RECOMMENDED TORQUE VALUE	
IN	MM		ASME	MSS-SP44	DIN	JIS	FT•LB	N•m
28	700	75 to 275	---	---	---	10	535	725
		75 to 275	---	---	16	---	588	797
		75 to 275	---	---	---	16	695	942
		75 to 275	---	---	---	20	802	1087
30	750	up to 75	---	150	---	---	395	536
		up to 75	---	---	---	10	435	590
		up to 75	---	---	---	16	566	767
		up to 75	---	---	---	20	755	1024
		75 to 275	---	150	---	---	485	658
		75 to 275	---	---	---	10	535	725
		75 to 275	---	---	---	16	695	942
		75 to 275	---	---	---	20	927	1257
32	800	up to 75	---	150	---	---	640	868
		up to 75	---	---	10	---	588	797
		up to 75	---	---	---	10	504	683
		up to 75	---	---	16	---	705	956
		up to 75	---	---	---	16	882	1196
		up to 75	---	---	---	20	1019	1382
		75 to 275	---	150	---	---	875	1186
		75 to 275	---	---	10	---	804	1090
		75 to 275	---	---	---	10	689	934
		75 to 275	---	---	16	---	964	1307
		75 to 275	---	---	---	16	1205	1634
		75 to 275	---	---	---	20	1393	1889
36	900	up to 75	---	150	---	---	665	902
		up to 75	---	---	10	10	598	811
		up to 75	---	---	16	---	838	1136
		up to 75	---	---	---	16	1047	1419
		up to 75	---	---	---	20	1210	1640
		75 to 275	---	150	---	---	875	1186
		75 to 275	---	---	10	10	787	1067
		75 to 275	---	---	16	---	945	1281
		75 to 275	---	---	---	16	1181	1601
		75 to 275	---	---	---	20	1365	1851



**Continental Disc®
Corporation**

Performance Under Pressure®

HEADQUARTERS //
3160 W. Heartland Drive
Liberty, MO 64068 USA
Ph (816) 792-1500
Fax (816) 792-2277
sales@contdisc.com
contdisc.com